

AUTON™ MOTORIZED SYSTEMS

The Authority in Custom Motorized Lifts

INSTRUCTIONS



ES MODELS:

EXTEND BASE

2000-E
2001-E
2002-E

SWIVEL BASE

2000-S
2001-S
2002-S

EXTEND & SWIVEL BASE

2000-ES
2001-ES
2002-ES

PLASMA/LCD SWIVEL BASE


2000-PS
2001-PS
2002-PS
2003-PS

WWW.AUTON.COM


2755 Avenue Scott | Valencia, California 91355

Phone: 661-257-9282 | Fax: 661-295-5638


E-mail: tvlifts@auton.com

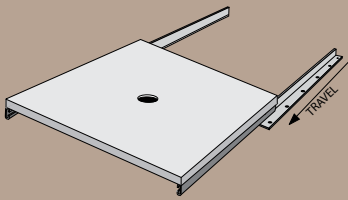


E Models

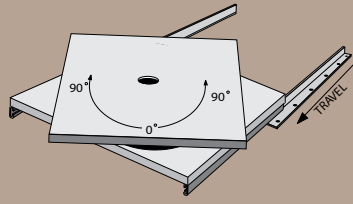

ES Models

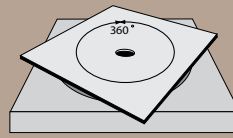

S Models

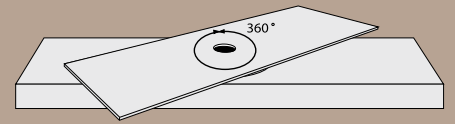

PS Models

OPERATION

To Extend the Platform: (E, ES models only)



Press button 1 until unit starts to move, then release.
Once platform is fully extended the swivel can be used.
(ES models only)

To Swivel the Platform: (S, ES, PS models only)

LEFT: Press button 2 until unit starts to move, then release.
To stop the swivel, press the same button again, or the STOP button.

RIGHT: Press button 3 until unit starts to move, then release.
To stop the swivel, press the same button again, or the STOP button.

The swivel will automatically stop at the front center position and the 180° position if the button is not pressed.

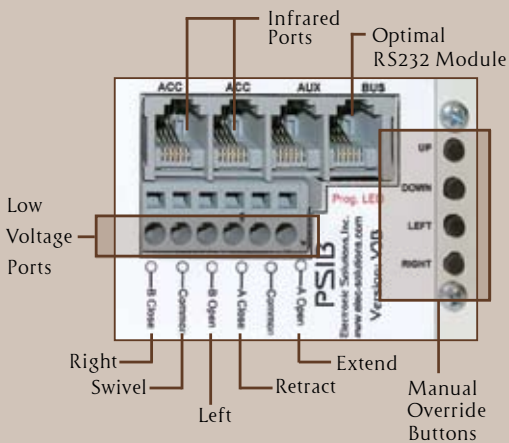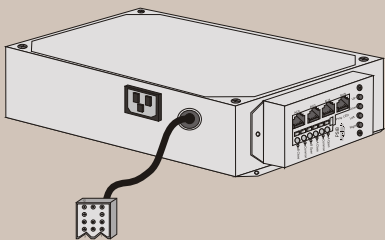

NOTE:

At any point during the platform's travel, you can press the STOP button to stop the unit.



REMEMBER:

Extend and Swivel Models will NOT swivel unless it is fully extended, and will NOT extend or retract unless the swivel is in the center position.
NEVER MOVE THE SWIVEL OR PLATFORM BY HAND!

INSTALLATION SUPPORT:

We take great pride in manufacturing the best lift systems in the world. Our design and production techniques enable simple installation. In the event that you require assistance, do not hesitate to contact one of our technicians. We will be happy to answer your questions and resolve any problems you encounter during the installation process. Phone Support: 661-257-9282, ext. 104 • Email Support: tech@auton.com